



TRIUMPH

Thunderbird 1700 Storm my 10/16

product	code	description
Twins shock (R-L-P)	MT134.1D-N	M40D set twin shock (Dark)
Twins shock (R-L-P)	MT134.1D-C	M40D set twin shock (Chrome)
Twins shock (C-R-L-P)	MT134.1KC-N	M40KC set twin shock (Dark)
Twins shock (C-R-L-P)	MT134.1KC-C	M40KC set twin shock (Chrome)

C = Chromed Spring / Molla Cromata - N = Black Spring / Molla Nera



M40KC




M40D



Compression adjustment



Preload adjustment

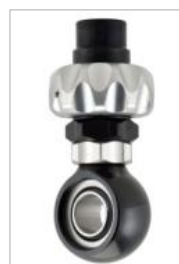

Rebound adjustment



Length adjustment

C = Compression adj. / regolaz. Compressione
R = Rebound adj. / regolaz. Estensione
L = Length adj. / regolazione Interasse
P = standard spring Preload / Precarico molla std